

HOW TO MEASURE

V1 TexTrop™ External Vest Carrier

Use the directions and chart that follow to determine what V1 TexTrop™ External Vest Carrier size best fits your existing external vest carrier.

Measure (in inches) the width of your existing external vest carrier's front panel at the bottom widest point. Next, measure (in inches) the length of the front panel at the center of the panel.

The measurements allow for 3" of total extra room for velcro overlap at sides and 1/8" extra room for vertical distance at center front between armor panel carrier and actual V1TexTrop™ External Vest Carrier.

V1 Size	Existing Panel Width (in inches)	Existing Panel Length (in inches)	NIJ Size
XS - Short	14	10 1/4	C1
XS - Reg	16	11 3/4	C2
S - Short	16	11 1/4	C2
S - Reg	18	12 3/4	C2
M - Short	18	12 1/4	C2
M - Reg	20	13 3/4	C3
M - Long	21	15 1/4	C3
L - Reg	22	14 3/8	C3
L - Long	23	15 7/8	C4
L - X Long	24	17 3/8	C4
XL - Reg	24	15 3/8	C4
XL - Long	25	16 7/8	C4
XL - X Long	26	18 3/8	C4
2XL - Reg	26	15 7/8	C4
2XL - Long	27	17 3/8	C4
3XL - Reg	28	16 1/8	C4
3XL - Long	29	17 5/8	C5



www.elbeco.com
1.800.468.4654